Slovakian Project

Ø21” 50 Bars Double Position LineStop Intervention without By-Pass

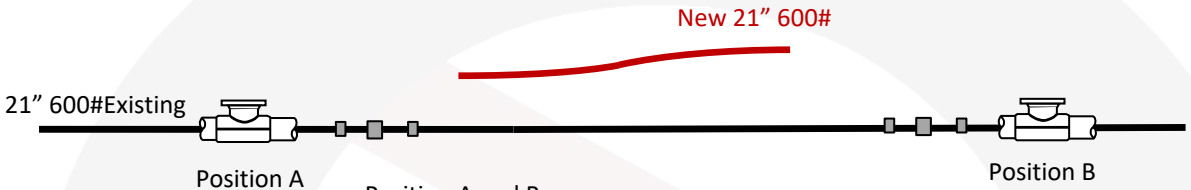

Position A and B
1- Digging the ground
2- Removing the protection of pipe
3- Welding of fitting on the existing pressured pipe
4- Testing the welded pieces

Slovakian Project

Ø21” 50 Bars Double Position LineStop Intervention without By-Pass

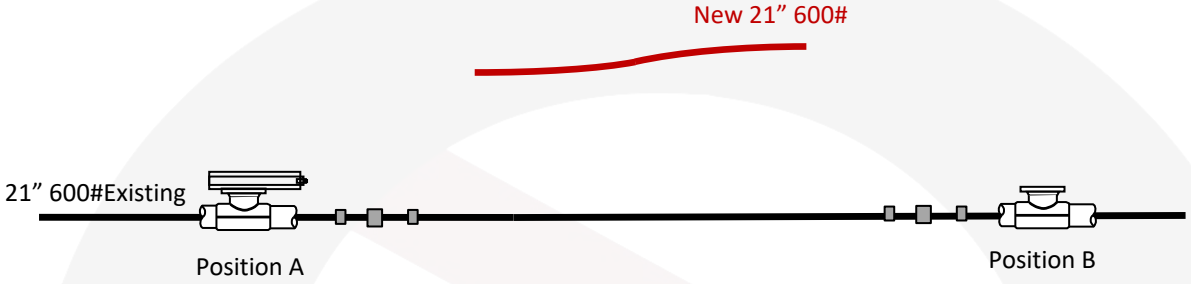

Position A

1- Installing the Sandwich or Hottap Valve on the fitting

www.propipe.com

Slovakian Project

Ø21” 50 Bars Double Position LineStop Intervention without By-Pass

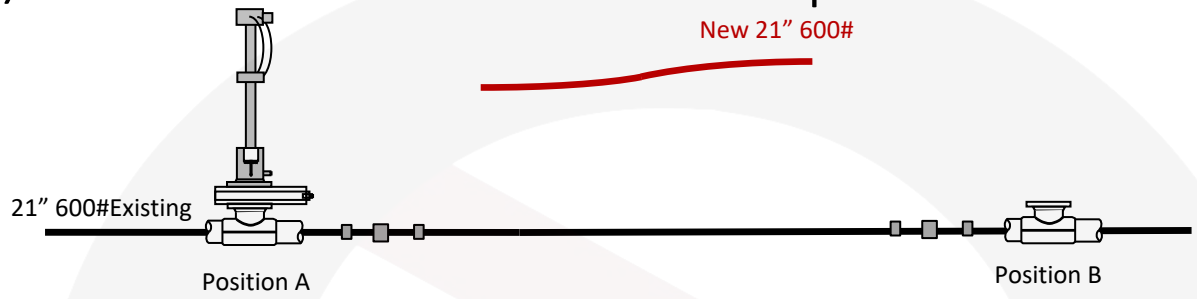

Position A

1- Installing the Tapping machine Propipe PTM-5108 on the Valve

Slovakian Project

Ø21” 50 Bars Double Position LineStop Intervention without By-Pass

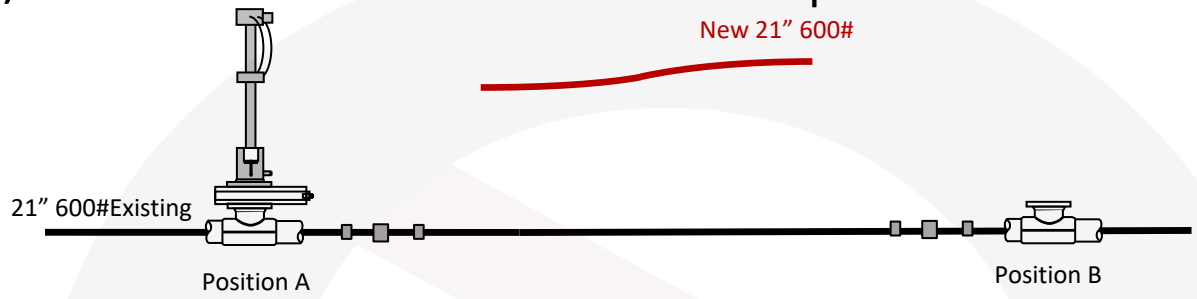

Position A

1- Performing the Hottap 21” using the Propipe power unit PPP-5000

Slovakian Project

Ø21” 50 Bars Double Position LineStop Intervention without By-Pass

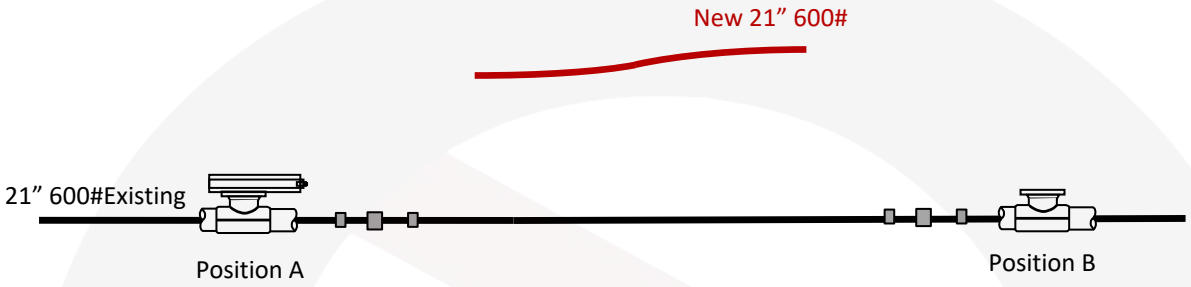

Position A
1- Removing the tapping machine
2- Remove the coupon from the Cutter
3- Check the wall thickness of coupon for the sealing element

www.propipe.com

Slovakian Project

Ø21” 50 Bars Double Position LineStop Intervention without By-Pass

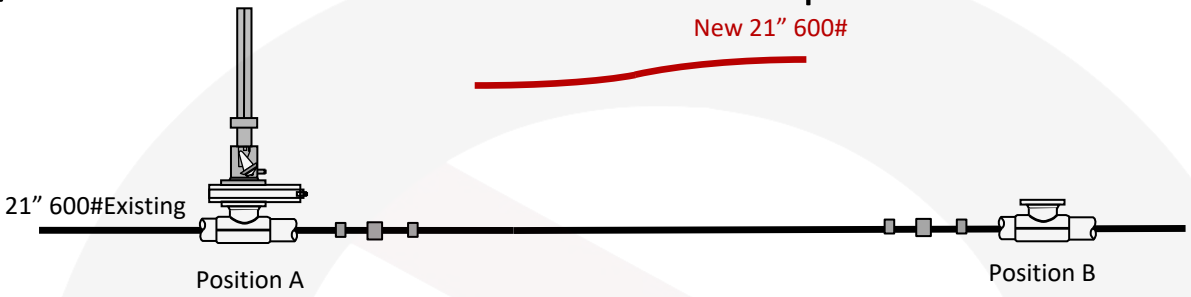

Position A
1- Preparing the LineStop head
2- Installing the actuator with the LineStop head

www.propipe.com

Slovakian Project

Ø21” 50 Bars Double Position LineStop Intervention without By-Pass

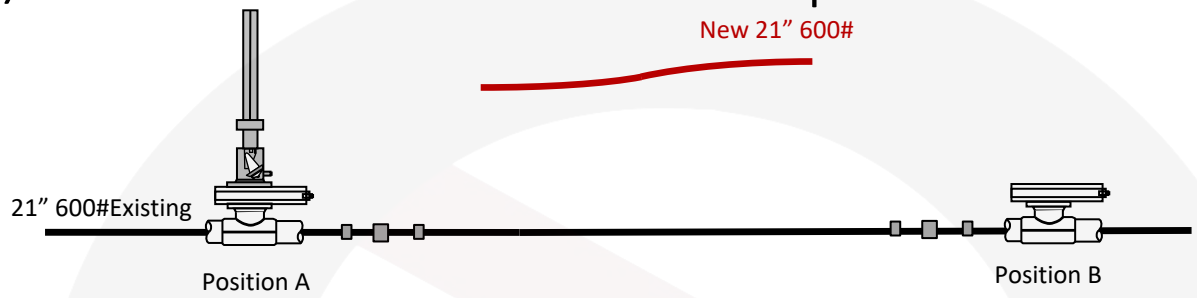

Position B
1- Installing Valve on Position B

www.propipe.com

Slovakian Project

Ø21” 50 Bars Double Position LineStop Intervention without By-Pass

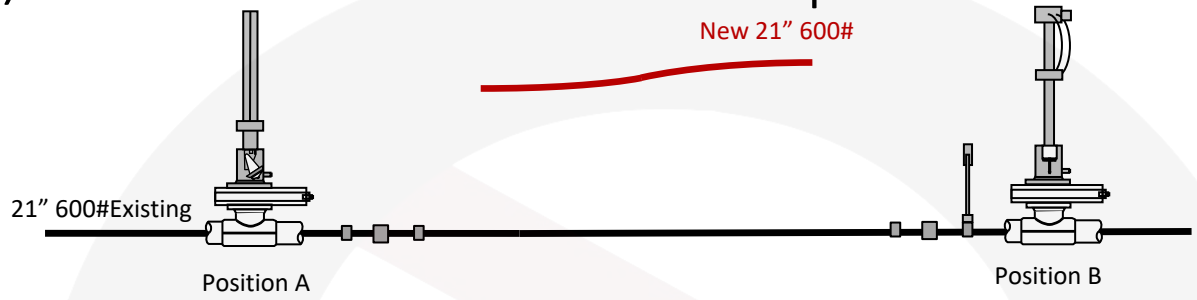

Position B
1- Installing tapping machine PTM-5108 and PTM-1028
2- Performing 21” and 2” Hottaps

Slovakian Project

Ø21” 50 Bars Double Position LineStop Intervention without By-Pass

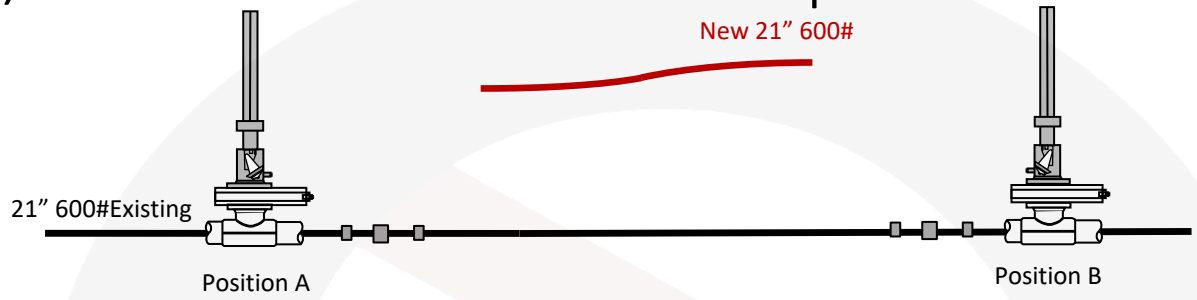

Position B
1- Preparing Actuator with LineStop Head
2- Installing the Actuator on the valve

Slovakian Project

Ø21” 50 Bars Double Position LineStop Intervention without By-Pass

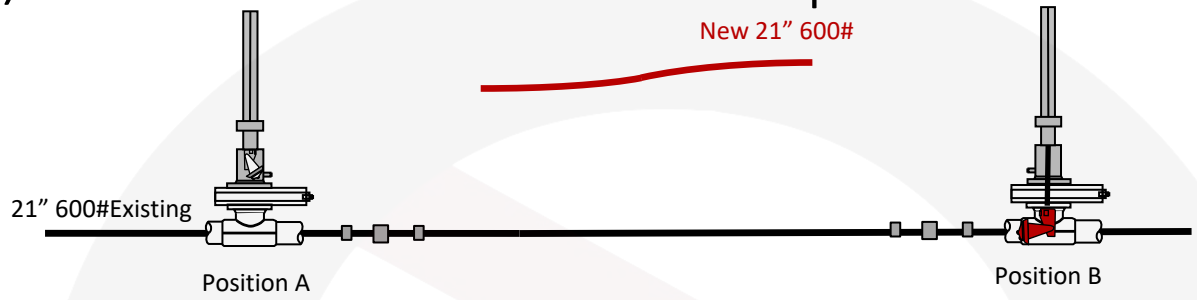

Position B
1- Introducing the LineStop in the Line and stopping the flow

www.propipe.com

Slovakian Project

Ø21” 50 Bars Double Position LineStop Intervention without By-Pass

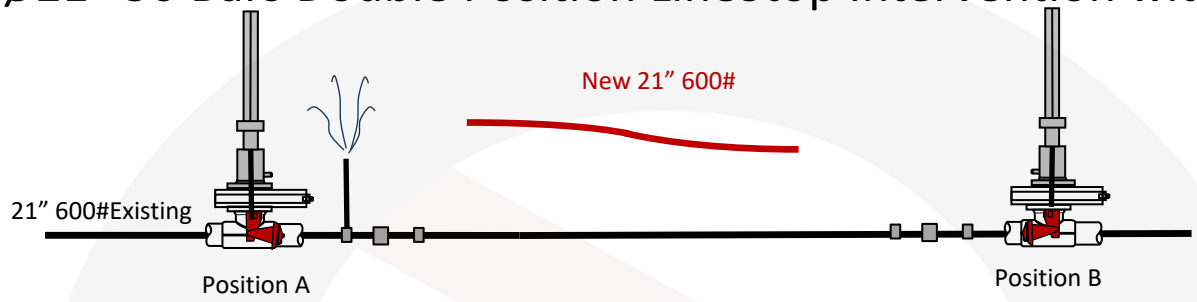

Position A

1- Introducing the LineStop head within the line and stopping the gas flow

2- Installing the a purge pipe on 2” TOR

3- Purging the entire section between position A and B

Slovakian Project

Ø21” 50 Bars Double Position LineStop Intervention without By-Pass

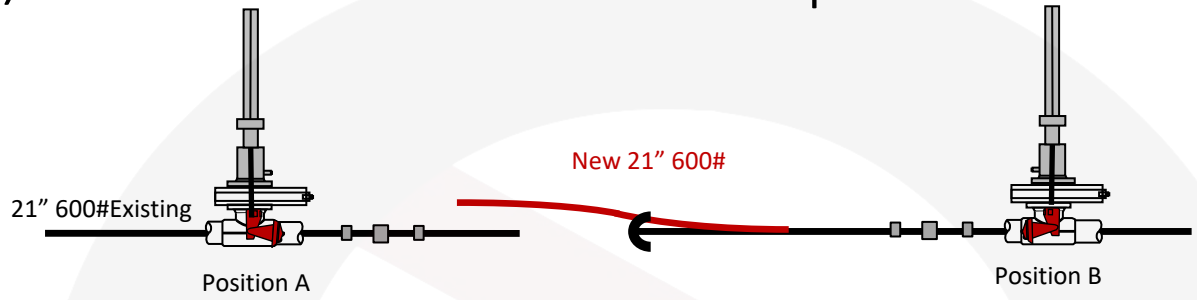

Position A
1- Cutting the pipe in position B
2- Welding the new pipe
3- Welding a cup on existing pipe

Slovakian Project

Ø21” 50 Bars Double Position LineStop Intervention without By-Pass

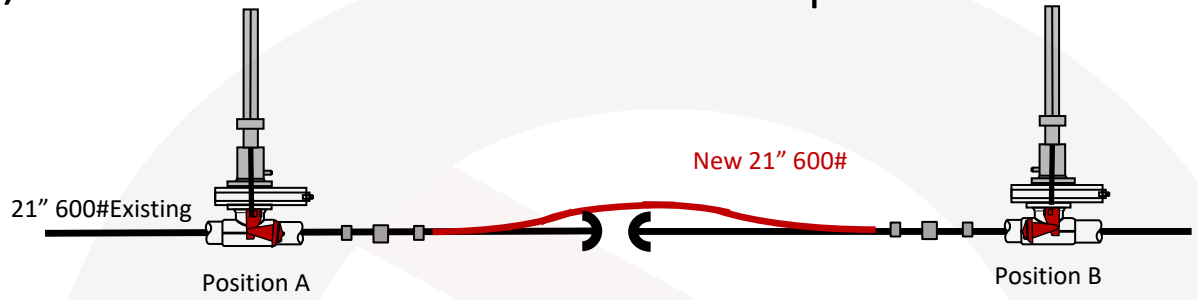

Position A
1- Cutting the pipe in position A
2- Welding the new pipe
3- Welding cup on existing pipe

www.propipe.com

Slovakian Project

Ø21” 50 Bars Double Position LineStop Intervention without By-Pass

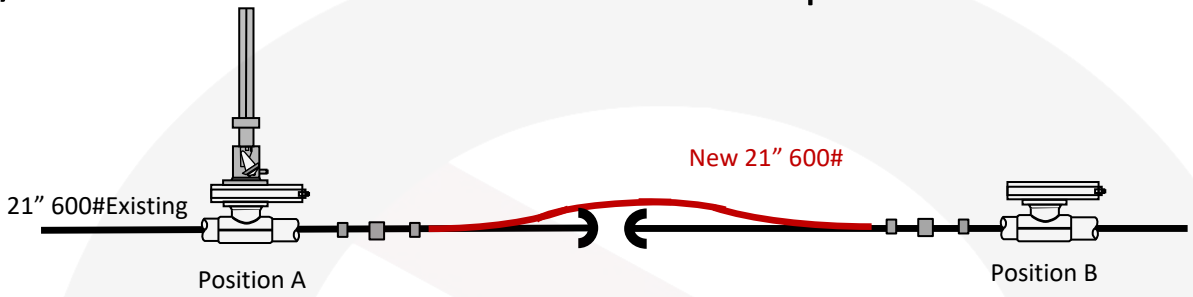

Position A
1- Removing the LineStop Head
2- Removing the Actuator
3- Preparing the Plug with Guide nipple in The machine

Position B
1- Removing the LineStop Head
2- Removing the Actuator
3- Preparing the Plug with Guide nipple in The machine

www.propipe.com

Slovakian Project

Ø21” 50 Bars Double Position LineStop Intervention without By-Pass

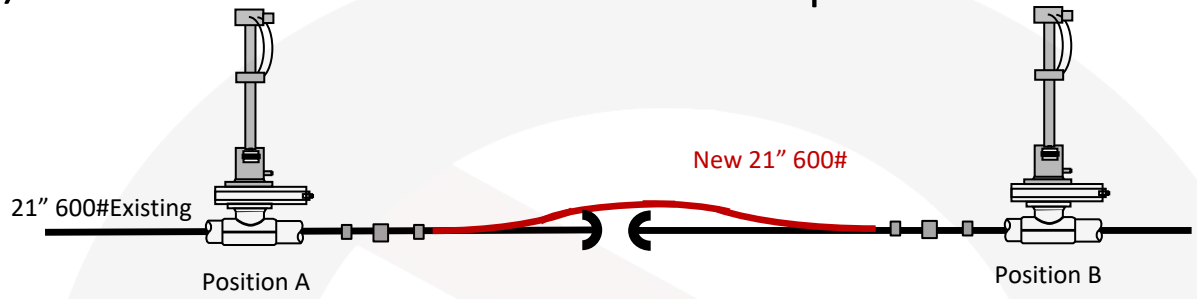

Position A
1- Installing the PTM-5108 Tapping Machine
2- Installing the Completion Plug in the fitting

Position B
1- Installing the PTM-5108 Tapping Machine
2- Installing the Completion Plug in the fitting

www.propipe.com

Slovakian Project

Ø21” 50 Bars Double Position LineStop Intervention without By-Pass

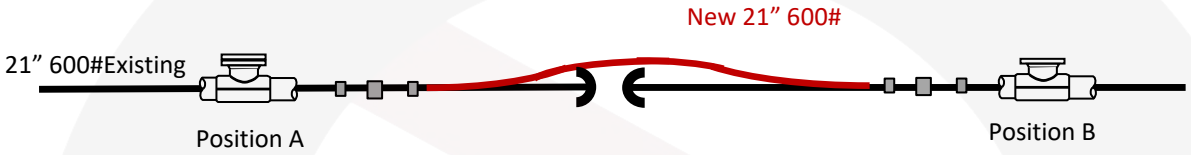

Position A
1- Remover the Machine
2- Remove the Valves
3- Install Blind Flange

www.propipe.com

Slovakian Project

Ø21” 50 Bars Double Position LineStop Intervention without By-Pass

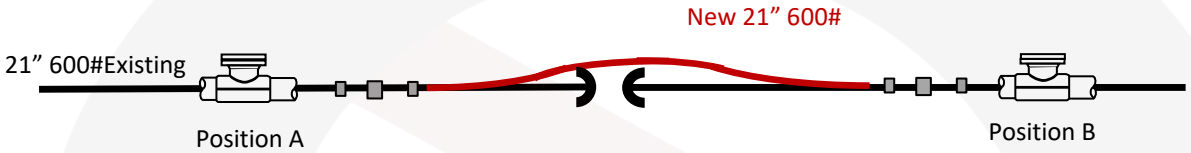

Position B
1- Remover the Machine
2- Remove the Valves
3- Install Blind Flange